


Jaguar XK (X150) 2010–2011 — fuse boxes

4 fuse boxes, 107 fuses · jagaux.com/fuses/jaguar/xk-x150/2010-2011-fuse-box/

Engine Compartment Fuse Box

Engine compartment · Factory name: Engine Compartment Fuse Box

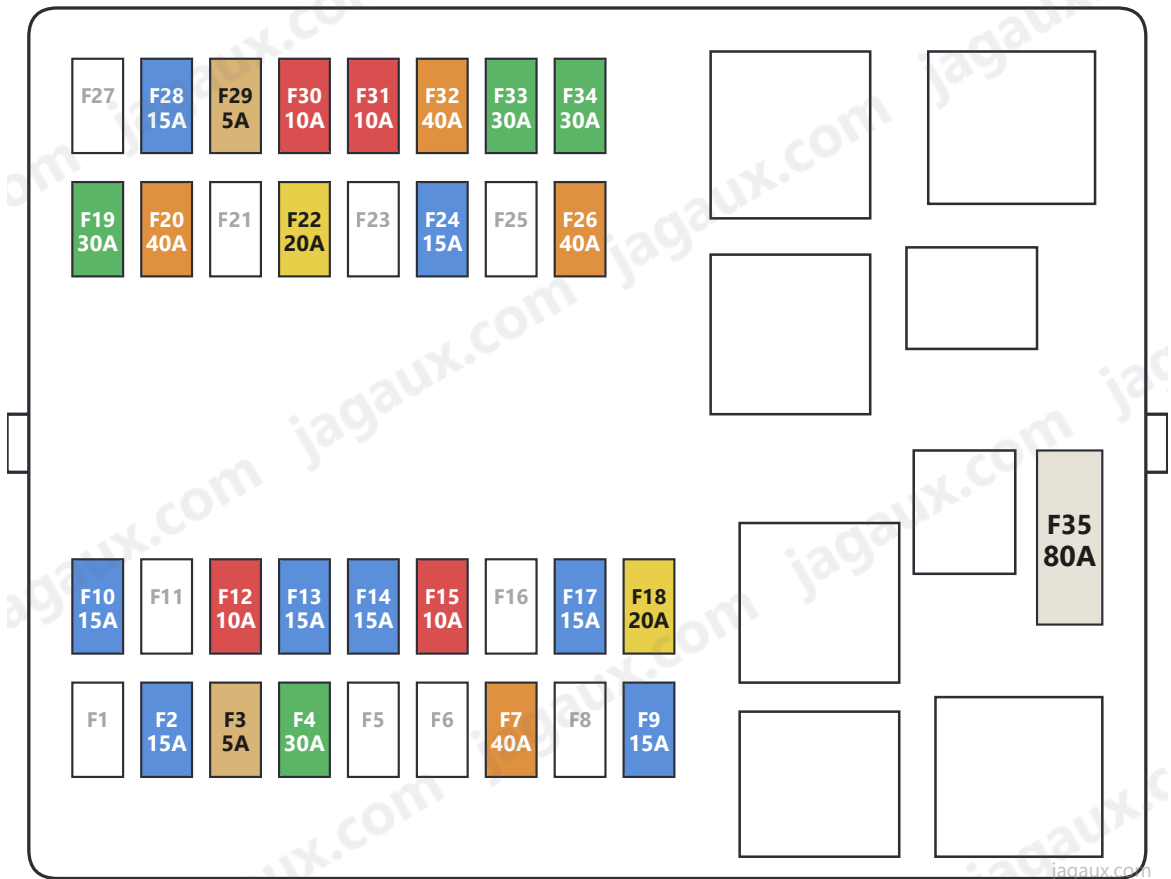


Fuse	Rating	Circuit
F1	—	Not used
F2	15 A	Adaptive front lighting system - LH.
F3	5 A	DSC ECU.
F4	30 A	Powerwash pump.
F5	—	Not used
F6	—	Not used
F7	40 A	Front left screen heater. Two factory editions of this model year differ for this position: 40 A and not used. Check the label on your own fuse box before fitting.
F8	—	Not used
F9	15 A	Cigar lighter heater element.
F10	15 A	Horn.
F11	—	Not used
F12	10 A	Headlamp levelling, Cluster VAPS.
F13	15 A	Adaptive front lighting system - RH.
F14	15 A	Ignition coils.
F15	10 A	ACC.
F16	—	Not used
F17	15 A	TCM, ECM memory.

Fuse	Rating	Circuit
F18	20 A	EMS main, EMS secondary control.
F19	30 A	Starter.
F20	40 A	DSC pump.
F21	—	Not used
F22	20 A	DSC valves.
F23	—	Not used
F24	15 A	Intercooler water pump.
F25	—	Not used
F26	40 A	Wiper motor.
F27	—	Not used
F28	15 A	ECM, VVT diode.
F29	5 A	Oil quality, MAFS, DHTL.
F30	10 A	Throttle motor.
F31	10 A	Radiator fan, ECM cooling fan.
F32	40 A	Front right screen heater.
F33	30 A	UHEGO - A bank heaters.
F34	30 A	UHEGO - B bank heaters.
F35	80 A	Radiator fan - Normally aspirated engines. 100A Black Radiator fan - Supercharged engines.

Passenger Compartment Fuse Box

Passenger compartment · Factory name: Passenger Compartment Fuse Box

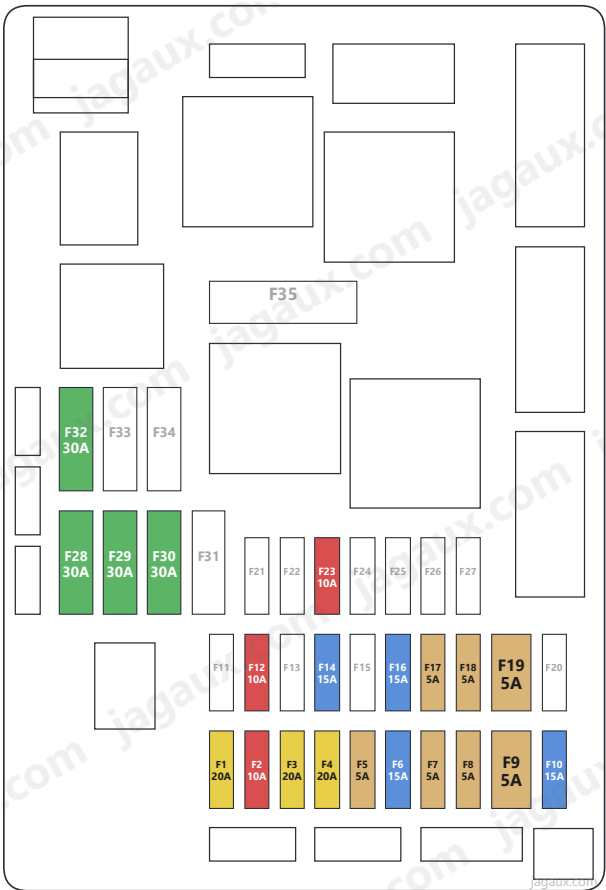

Fuse	Rating	Circuit
F1	20 A	Climate seats.
F2	10 A	ETS, Electric Parking Brake logic.
F3	20 A	Keyless vehicle module.
F4	20 A	Climate seats.
F5	5 A	Instrument panel logic.
F6	15 A	Air conditioning.
F7	5 A	Passive Anti-Theft System (PATS) transmitter/receiver.
F8	5 A	Foot brake switch.
F9	5 A	Passenger seat memory switch, Passenger seat module, Sunload sensor.
F10	15 A	Instrument panel (column adjust).
F11	—	Not used
F12	10 A	Interior lamp switched power comprises - map, courtesy, footwell, sun visor, glove box. In-car aspirator.
F13	—	Not used
F14	15 A	Adaptive dynamic ride control power.
F15	—	Not used
F16	15 A	Front power point, premium audio amplifier, cooling fan.
F17	5 A	OBD II.
F18	5 A	Driver's seat module, Singapore Road Pricing, Driver's seat memory, Driver's window and mirror switchpack.

Fuse	Rating	Circuit
F19	5 A	RF receiver.
F20	—	Not used
F21	—	Not used
F22	—	Not used
F23	10 A	Cabin accessory power.
F24	—	Not used
F25	—	Not used
F26	—	Not used
F27	—	Not used
F28	30 A	Passenger seat motor (2).
F29	30 A	Passenger seat motor (1).
F30	30 A	Driver's seat module (1).
F31	—	Not used
F32	30 A	Driver's seat module (2).
F33	—	Not used
F34	—	Not used
F35	—	Not used

Megafuse Fuse Box

Luggage compartment, at the battery · Factory name: Megafuse Fuse Box

Fuse	Rating	Circuit
CENTRAL JUNCTION BOX	175 A	Battery junction box to the central junction box at the base of the LH A-post (FSJB), connector BA001
JUMP START POST	400 A	Battery junction box to the panel stud and jump start post, connector BT001
REAR JUNCTION BOX	175 A	Battery junction box to the auxiliary junction box behind the rear seat backrest (RSJB), connector BO001

Rear Seat Compartment Fuse Box

Behind the rear seat compartment trim · Factory name: Rear Seat Compartment Fuse Box



Fuse	Rating	Circuit
F1	25 A	Passenger door zone ECM.
F2	5 A	Tyre Pressure Monitoring System.
F3	—	Not used
F4	—	Not used
F5	—	Not used Two factory editions of this model year differ for this position: not used and 5 A. Check the label on your own fuse box before fitting.
F6	—	Not used
F7	—	Not used
F8	5 A	Power roof logic.
F9	—	Not used
F10	10 A	Accessory connector B+.
F11	—	Not used
F12	—	Not used
F13	25 A	Driver's door zone ECM, OBD2.
F14	10 A	Navigation, VICS, power.
F15	—	Not used
F16	—	Not used
F17	10 A	Restraints control module, Instrument pack, Occupancy classification sensor.

Fuse	Rating	Circuit
F18	30 A	Electric Parking Brake (EPB).
F19	10 A	Supercharged active exhaust.
F20	—	Not used
F21	15 A	IHU, supply (IAV, ICM, ICP).
F22	5 A	Phone, VEMS, power.
F23	30 A	Heated rear screen.
F24	10 A	AUU. Two factory editions of this model year differ for this position: 10 A and not used. Check the label on your own fuse box before fitting.
F25	10 A	DVD, power.
F26	—	Not used
F27	10 A	Pedestrian impact sensor. Two factory editions of this model year differ for this position: 10 A and not used. Check the label on your own fuse box before fitting.
F28	40 A	E-Diff. Two factory editions of this model year differ for this position: 40 A and not used. Check the label on your own fuse box before fitting.
F29	—	Not used
F30	40 A	Power roof rear quarters.
F31	30 A	Power Amp supply.
F32	40 A	Power roof supply.
F33	30 A	Fuel pump module.
F34	40 A	Blower motor.

Fuse ratings and circuits are given for reference — always check against the label on your own fuse box, build variations exist within a model year.

Full interactive version, other model years and change history: jagaux.com/fuses/jaguar/xk-x150/2010-2011-fuse-box/ · generated 2026-09-19